

Drive and stirring technology for

PHARMA | FOOD | COSMETICS | CHEMICALS | AUTOMATION



FREQUENCY CONVERTER

Our electric agitator drives can be safely controlled and regulated via our frequency converters with integrated motor protection switch. The display can be used to display data, such as speed, frequency, motor current etc.. Thanks to the integrated emergency stop, the complete system is safe according to UVV (accident prevention regulations). The motor can be parameterized via the menu. The frequency converter is already equipped with a motor angle on the motor for easy attachment.




Display

Control menu



Motor angle or motor plate for easy installation on the motor

WE GENERATE MOVEMENT IN SPECIAL ENVIRONMENTS.

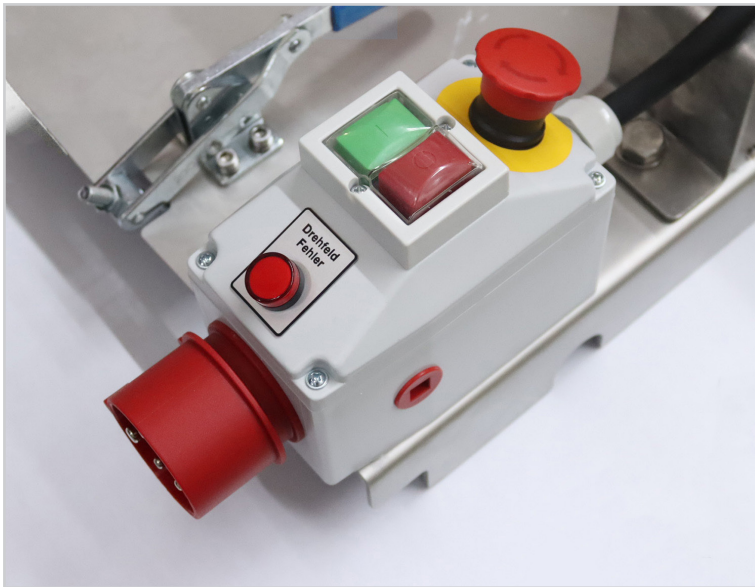

THANKS TO THE INTEGRATED EMERGENCY STOP, THE COMPLETE SYSTEM IS SAFE IN ACCORDANCE WITH ACCIDENT PREVENTION REGULATIONS.

TECHNICAL DATA

| Variants frequency converter | Art. no. | Power [kW] | Voltage [V] |
|--|----------|------------|-------------|
| Frequency converter and motor protection switch mounted on motor angle | 6620 | 0.75 | 230 |
| Frequency converter and motor protection switch mounted on motor angle | 6621 | 0.75 | 400 |
| Frequency converter and motor protection switch mounted on motor angle | 6622 | 1.1 to 1.5 | 230 |
| Frequency converter and motor protection switch mounted on motor angle | 6623 | 1.1 to 1.5 | 400 |
| Frequency converter and motor protection switch mounted on motor plate | 6624 | 0.75 | 230 |
| Frequency converter and motor protection switch mounted on motor plate | 6625 | 0.75 | 400 |
| Frequency converter and motor protection switch mounted on motor plate | 6626 | 1.1 to 1.5 | 230 |
| Frequency converter and motor protection switch mounted on motor plate | 6627 | 1.1 to 1.5 | 400 |

WE GENERATE MOVEMENT IN SPECIAL ENVIRONMENTS.